


## UPSTEALTH “WALL CHARGING ADAPTER”

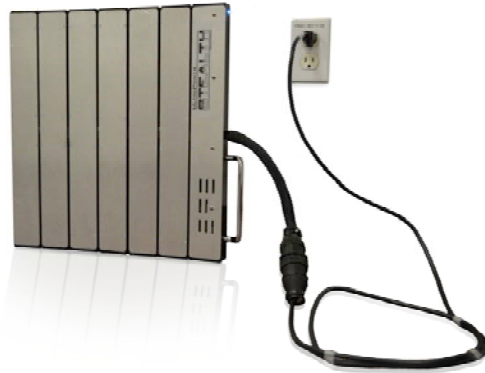

The UPStealth Battery Panel can be charged without being connected to the Inverter. All that is required is the UPStealth Wall Charging Adapter.

The UPStealth Wall Charging Adapter plugs into the military barrel connector located on the battery panel, while the other end of the charging adapter plugs into a 120 VAC wall outlet.

LED’s located on the battery panel communicate the charging status of the panel.

### LED DESCRIPTION:

| STATUS LIGHT                          | MEANING                            |
|---------------------------------------|------------------------------------|
| Red to Green to Blue, ~1 second apart | Initialization of panel when first |
| Steady Green, Flashing Blue           | Normal operation; no errors.       |
| Steady Red, Flashing Blue             | Error condition.                   |
| Solid Blue                            | Panel is providing backup power.   |

**WARNING:** The UPStealth Wall Charging Adapter Cable should be connected to the Battery Panel first and then to the 120 VAC power.

When disconnecting the UPStealth Wall Charging Adapter, disconnect from the AC source first and then remove the cable from the Battery Panel.

### **ATTENTION:**

Disconnect cable from battery when not in use. Failure to do so will require a factory reset of battery panel. All associated cost are not covered under warranty.