

Nano IP Firmware Upgrade Procedure

Author:
Microhard Systems Inc.

Created On: 14 Jan 2010 09:28 AM

At times new features or enhancements will require the firmware to be upgraded in the Nano IP. This procedure applies to all versions of Nano IP.

To upgrade the firmware in a Nano IP unit, use the following procedure:

1. Locate the upgrade file(s) supplied by Microhard Systems Inc.;
2. Login to the web interface page, go to Systems Tools->System Maintenance;
3. Browse and select the saved file in step 1;
4. If Erase Settings is desired, please check off the checkbox, settings will be set to default, otherwise old settings will be kept.
5. Click on Upload and wait for the unit to reboot.

The upgrade procedure is now complete, repeat for all units as applicable.